

IECH20 PARTS LIST

No.	Code	Description
1		Housing
2	IECH20P2	Air Filter Kit
2	IECH20P2M	Air Filter Kit (Metal)
3		Exhaust Pipe
4		Spring Washer
5		Screw
6		Cylinder Head
7		Gasket
8		Valve
9		Valve Plate Spacer
10		Valve Plate
11		Gasket Cylinder
12		Cylinder
13		Screw
14		Cylinder-to-crankcase Gasket
15		Piston Pin
16		Compression Ring
17		Scraper Ring
18		Circlip
19		Piston
20	IECH20P20	Connecting Rod
21		Screw
22		Hexagon Nut
23	IECH20P23	Crank Shaft
24	IECH20P24	Capacitor

Kit	Code	Description
KIT 1	IECH20K1	Gasket Kit
KIT 2	IECH20K2	Tube Kit
KIT 3	IECH20K3	Pump Assembly Kit

No.	Code	Description
25		Spring Washer
26		Hexagon Nut
27		Crankcase cover
28		O-ring
29		Oil Sight Glass
30		O-ring
31		Screw
32		O-ring
33	IECH20P33	Oil Breather
34		Gasket
35		Crankcase
36		Plain washer
37		Screw
38		Seal
39		Bearing
40		Rotator
41		Bearing
42		Stator
43		Bearing Cover
44	IECH20P44	Thermo-protect
45	IECH20P45	Fan
46		Circlip
47		Plain washer
48		Spring washer

No.	Code	Description
49		Screw
50		Electric cable
51		Plug
52		Pressure Gauge
53	IECH20P53	Check Valve
54		Handle
55		Pyramidal-ringer
56		Hexagon nut
57		Exhaust pipe
58	IECH20P58	Drain cock
59		Tank
60		Screw
61		Plain washer
62		Screw
63		Main Board
64	IECH20P64	Cushion Foot
65		Screw
66		Pressure Regulator
67		Air Cock
68		Connect
69		Safety Valve
70	IECH20P70	Pressure Switch
71		Pyramidal-ringer
72		Hexagon Nut
73		Unloader tube

Other parts are available by special order.

