


# Interchange Industrial CN70-I

## Parts List for Interchange Industrial CN70-I (Item No. 65710)

Note: When ordering parts, please state part order number and description.

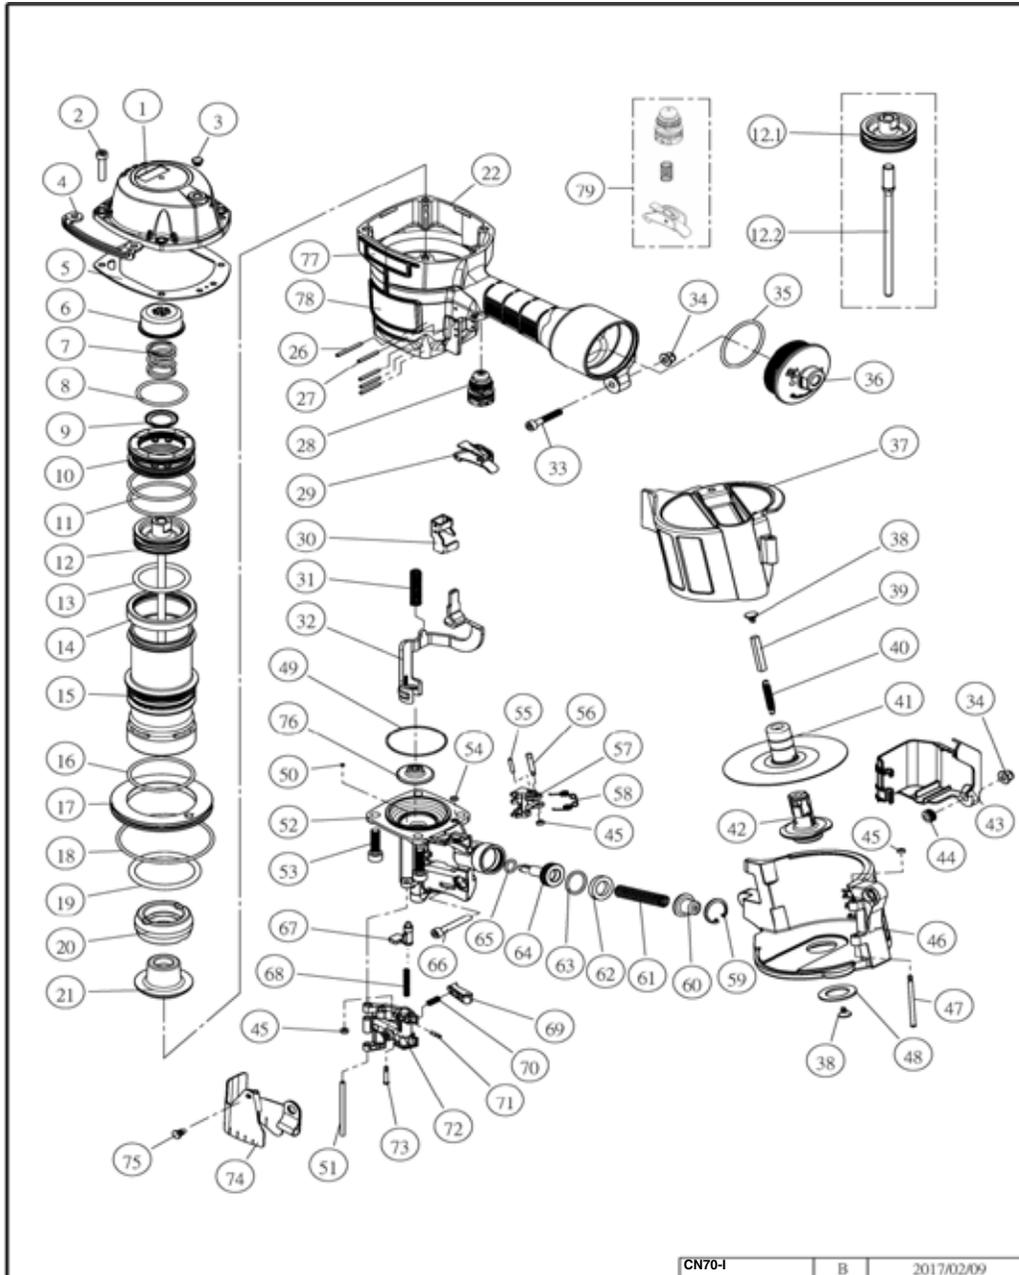

NO.	ORDER NO.	DESCRIPTION	QTY	NO.	ORDER NO.	DESCRIPTION	QTY
1	100434	Cylinder Cap Unit	1	41	100210	Nail Support	1
2	100127	Screw M6 X 30	4	42	100214	Magazine Post	1
3	100142	Grommet	1	43	100216	Contact Arm Cover	1
4	100143	Protector	2	44	100119	Collar	1
5	100144	Cylinder Cap Seal	1	45	100078	Rubber Washer	3
6	100145	Piston Stop	1	46	100215	Magazine	1
7	100146	Spring, Head Valve	1	47	100079	Step Pin	1
8	100147	O-Ring	1	48	100221	Rubber Washer	1
9	100219	Washer, Head Valve Spring	1	49	100180	O-Ring	1
10	100148	Head Valve Piston	1	50	100296	O-Ring	1
11	100149	O-Ring	2	51	100179	Straight Pin	1
12	101825	Main Piston Assembly	1	52	100294	Nose	1
12.1	101824	Main Piston	(1)	53	100188	Screw Socket Hd M8 X 30	4
12.2	101823	Driver	(1)	54	100073	O-Ring	1
13	100153	O-Ring	1	55	100066	Roll Pin	1
14	100154	Cylinder Seal	1	56	100095	Step Pin	1
15	100155	Cylinder	1	57	100199	Feed Pawl	1
16	100156	O-Ring	1	58	100092	Spring, Feed Pawl	1
17	100157	Cylinder Ring	1	59	100104	C-Ring	1
18	100158	O-Ring	1	60	100207	Spring Collar	1
19	100159	O-Ring	1	61	100206	Spring, Feed Piston	1
20	100176	Bumper A	1	62	100205	Stop, Feed Piston	1
21	100177	Bumper B	1	63	100098	O-Ring	1
22	103132	Frame	1	64	100203	Feed Piston	1
26	100220	Roll Pin	1	65	100011	O-Ring	1
27	100174	Roll Pin	4	66	100045	Screw Socket Hd M6 X 40	1
28	100063	Trigger Valve Unit (C.T)	1	67	100083	Door Latch	1
29	100067	Trigger Unit (C.T)	1	68	100084	Spring, Door Latch	1
30	100175	Contact Arm Guide	1	69	100197	Check Pawl	1
31	100185	Spring, Contact Arm	1	70	100085	Spring, Check Pawl	1
32	100186	Contact Arm	1	71	100090	Roll Pin	1
33	100208	Screw Socket Hd M6 X 35	1	72	100191	Door	1
34	100117	Nut, Elastic Stop M6	2	73	100194	Step Pin	1
35	100168	O-Ring	1	74	100187	Dust Cover	1
36	100432	End Cap	1	75	100080	Hook Dust Cover	1
37	100209	Magazine Cover	1	76	100283	Driver Guide	1
38	100113	Receiver, Spring	2	77	103121	Name Label	2
39	100110	Spacer	1	78	100037	Warning Label	1
40	100111	Tension Spring	1	79	100453	Seq. Trigger Valve Assy	(1)