

### S5016AL, S7116AL and SA1116AL PARTS LIST (by No.)

NO.	Code	Description	NO.	Code	Description
1	18012	Cap	26	11190	Pusher ( SA1116AL)
2	90036	O-Ring	27	18200	Rear Magazine Bumper
3	90001	O-Ring	28	93001	Hex. Soc. FT HD Screw
4	15020-1	Piston Ram Assembly (S5016AL )	29	98006	Buttom. HD. Soc. Screw
	17023-1	Piston Ram Assembly (S7116AL )	30	18212	Magazine Retainer
	11020-1	Piston Ram Assembly ( A1116AL )	31	18410	Step Pin
5	90034	O-Ring	32	18230	Trigger
6	18041	Cylinder	33	18240	Seal
7	18050	Bumper	34	18487-1	Body (Auto Series)
8	18060-1	Trigger Valve Set	35	18271	Magazine Latch Spring
9	18070	Trigger valve spring	36	18281	Magazine Latch
10	90055	O-Ring	37	94001-1	Air Plug
11	18090	Trigger valve	38	18291	Pin
12	90006	O-Ring	39	95001	E-Ring
13	90008	O-Ring	42	18310-1	Trigger Valve plate (Auto Series Only)
14	90009	O-Ring	43	90005	O-Ring
15	18110	Trigger valve stem	44	90033	O-Ring
16	18130	Trigger valve guide	45	90033	O-Ring
17	90007	O-Ring	51	90015	O-Ring
18	91013-1	Hex.HD Soc Screw + Spring Washer	52	18340	Latch Bracket
20	91001	Hex.HD Soc Screw	53	18330	Nose Cover
21	15140	Nose ( S5016AL )	54	96002	Split Pin
	17141	Nose ( S7116AL )	55	96001	Split Pin
	11140	Nose ( SA1116AL )	56	90035	O-Ring
22	15151	Nose Plate ( S7116 AL )	57	18360	End Cap
	15150	Nose Plate ( S5016 AL& SA1116AL )	58	97003	Nut
23	17161	Magazine Cover ( S7116 AL )	59	18350-1	Trigger Valve A Kit
	15161	Magazine Cover ( S5016 AL)	64	18390	Double Trigger Latch Spring
	11161	Magazine Cover ( SA1116AL )	65	28100	Double Trigger
24	18171	Pusher Spring	66	18370	Pin
25	15181	Magazine( S5016 AL )	67	95002	C-Ring
	17181	Magazine (S7116 AL )	68	18322-1	Automatic adjust switch Kit
	11181	Magazine ( SA1116AL )	74	18323	Switch Cover
26	15190	Pusher ( S5016AL)	75	98012	Round Head Screw
	17191	Pusher ( S7116AL)			